

TOSHIBA

Uninterruptible Power Supplies



1000 Series

Reliability in motion™

**User Manual
1000 Series
Uninterruptible Power Supplies (UPS)
Single Phase 1000/1200 VA**

IMPORTANT NOTICE

The instructions contained in this manual are not intended to cover all of the details or variations in equipment, or to provide for every possible contingency concerning installation, operation, or maintenance. Should further information be required or if problems arise which are not covered sufficiently, contact your Toshiba sales office at 713-466-0277.

The contents of this instruction manual shall not become a part of or modify any prior or existing agreement, commitment, or relationship. The sales contract contains the entire obligation of Toshiba International Corporation (TIC) 's UPS Division. The warranty contained in the contract between the parties is the sole warranty of Toshiba International Corporation's UPS Division and any statements contained herein do not create new warranties or modify the existing warranty.

Any electrical or mechanical modifications to this equipment without prior written consent of Toshiba International Corporation will void all warranties and may void the UL/CUL listing. Unauthorized modifications can also result in personal injury, death, or destruction of the equipment.

UNINTERRUPTIBLE POWER SUPPLY

Complete the information below for the UPS system received.

Unless otherwise specified on the warranty card, the warranty period for the UPS or UPS part is 36 months from the shipment date (see TIC bill of lading).

Unless otherwise specified on the warranty card, the warranty period for a UPS battery is 24 months from the shipment date (see TIC bill of lading).

Please complete the following information and retain for your records.

Job Number: _____

Model Number: _____

Serial Number: _____

Application: _____

Shipment Date: _____

Installation Date: _____

Inspected By: _____

July, 2005

Document Number: **57723-001**

Table of Contents

Manual’s Purpose and ScopeIV
 Contacting Toshiba International Corporation’s Customer Support Center..... V
 EMC Statements VI
 General Safety Instructions VIII
 Important Safety Instructions.....XI
 Important Safety Instructions (cont'd)..... XIII
 Instructions Importantes Concernant XV
 Inspection/Storage/Disposal.....XVI
 Installation Precautions XVIII
 Operating Precautions..... XX
 1. Introduction..... 1
 2. System Description 1
 2.1 General Description 2
 2.2 System Configuration 5
 3. Storage 6
 4. Installation 7
 4.1 Environment..... 7
 4.3 Front Panel Settings 16
 5. Computer and Alarm Connections 18
 6. User’s Guide to Operations 20
 6.1 UPS Startup and Shutdown 20
 6.2 Button Operation 20
 6.3 Control Panel functions..... 21
 6.4 Interpreting UPS Messages 24
 6.5 Troubleshooting 25
 7. Maintenance 26
 8. Technical Specifications 27
 8.1 Power Range 1000-1200 VA (LV) 27
 8.2 Power Range:1000 VA (19” Rack-mount model, LV, 1U & 2U) 28
 8.3 Power Range 1000-1200 VA (HV)..... 29
 8.4 Power Range 1000 VA (19” Rack-mount model, HV, 1U & 2U) 30
 9. Warranty Information..... 33

Manual's Purpose and Scope

This manual provides information on how to safely install, operate, and maintain your TIC power electronics product. This manual includes a section of general safety instructions that describes the warning labels and symbols that are used throughout the manual. Read the manual completely before installing, operating, or performing maintenance on this equipment.

This manual and the accompanying drawings should be considered a permanent part of the equipment and should be readily available for reference and review. Dimensions shown in the manual are in metric and/or the English equivalent.

Toshiba International Corporation reserves the right, without prior notice, to update information, make product changes, or to discontinue any product or service identified in this publication.

TOSHIBA INTERNATIONAL CORPORATION is a registered trademark of the Toshiba International Corporation. All other product or trade references appearing in this manual are registered trademarks of their respective owners.

Toshiba International Corporation (TIC) shall not be liable for direct, indirect, special, or consequential damages resulting from the use of the information contained within this manual.

This manual is copyrighted. No part of this manual may be photocopied or reproduced in any form without the prior written consent of Toshiba International Corporation.

© Copyright 2005 Toshiba International Corporation.

All rights reserved.

Printed in the U.S.A.

Contacting Toshiba International Corporation's Customer Support Center

Toshiba International Corporation's Customer Support Center can be contacted to obtain help in resolving any **Uninterruptible Power Supply** system problems that you may experience or to provide application information.

The center is open from 8 a.m. to 5 p.m. (CST), Monday through Friday. The Support Center's toll free number is US (800) 231-1412/Fax (713) 896-5212.

The email address is toshibaups@tic.toshiba.com.

You may also contact Toshiba International Corporation by writing to:

Toshiba International Corporation
13131 West Little York Road
Houston, Texas 77041-9990
Attn: UPS Product Manager.

For further information on Toshiba International Corporation's products and services, please visit our website at www.tic.toshiba.com.

EMC Statements

FCC Part 15

NOTICE: Pursuant to section 15 of the FCC rules this product has been tested and complies with the conditions of a Class B digital device. The product has been established as offering sufficient protection against dangerous interference for installations in a residential area. Installation and use of the equipment should comply with the instructions provided in order to avoid interference due to the amount of radio frequency energy that is radiated and generated by the equipment.

TIC cannot assure that no interference will occur. Turn the unit on and off to help determine if the radio or television reception is found to be influenced by harmful interference from the equipment. If required, use one of the following measures to minimize the negative effects of interference:

- Place the receiving antenna in a separate location or orientation.
- Increase the distance between the receiver and the equipment.
- Ensure that your equipment and the receiver are on separate circuits.
- Contact a technician experienced with radio and TV or a dealer for further assistance.

ICES-003

This Class B Interference Causing Equipment meets all requirements of the Canadian Interference Causing Equipment Regulations ICES-003. Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Declaration of Conformity Request

Units labeled with a CE mark comply with the following standards and directives:

Harmonic Standards: EN 50091-1-1 and EN 50091-2.

EU Directives: 73/23/EEC, Council Directive on equipment designed for use within certain voltage limits.

93/68/EEC, Amending Directive 73/23/EEC.

89/336/EEC, Council Directive relating to electromagnetic compatibility.

92/31/EEC, Amending Directive 89/336/EEC relating to EMC.

The EC Declaration of Conformity is available upon request for products with a CE mark.

General Safety Instructions

DO NOT attempt to install, operate, maintain or dispose of this equipment until you have read and understood all of the product safety information and directions that are contained in this instruction manual.

Safety Alert Symbol / Signal Words

The Safety Alert Symbol indicates that a potential personal injury hazard exists. The symbol is comprised of an equilateral triangle enclosing an exclamation mark.



Signal Words

Listed below are the signal words that are used throughout this manual followed by their descriptions and associated symbols. When the words **DANGER**, **WARNING**, and **CAUTION** are used in this manual they will be followed by important safety information that must be carefully adhered to.

1. **Danger** — The word **DANGER** in capital letters preceded by the safety alert symbol indicates that an imminently hazardous situation exists that, if not avoided, will result in death or serious injury to personnel.



DANGER

2. **Warning** — The word **WARNING** in capital letters preceded by the safety alert symbol indicates that a potentially hazardous situation exists that, if not avoided, could result in death or serious injury to personnel.



3. **Caution/Attention** — The word **CAUTION** or **ATTENTION** in capital letters preceded by the safety alert symbol indicates that a potentially hazardous situation exists that, if not avoided, may result in minor or moderate injury.



4. The word **CAUTION** without the safety alert symbol indicates a potentially hazardous situation exists which, if not avoided, may result in equipment and property damage.

CAUTION

Special Symbols

Other warning symbols may appear in conjunction with the *Danger*, *Warning*, and *Caution* symbol and are used to specify special hazards. These warnings describe particular areas where special care and/or procedures are required in order to prevent serious injury and possible death.

1. **ELECTRICAL HAZARD SYMBOL** – Indicates a hazard that may cause injury from an electrical shock or burn. The symbol is comprised of an equilateral triangle enclosing a lightning bolt.



2. **EXPLOSION HAZARD SYMBOL** – Indicates a hazard that may cause injury from exploding parts. It is comprised of an equilateral triangle enclosing an explosion image.



Important Safety Instructions

This manual contains important instructions that should be followed during the installation, maintenance, and operation of the UPS and its batteries to assure safe and proper operation.

1. Turn off, lockout, and tagout all power sources before connecting the power wiring to the equipment or when performing maintenance.
2. Hardwire type UPS units are not equipped with an over-current protection device, nor do they have an output disconnect for the ac output. Therefore, a user-installed circuit breaker should be provided between the UPS output and the load input.
3. The maximum ambient operating temperature is 104° F (40° C).
4. Battery servicing should be performed by a qualified Toshiba Representative only.
5. Unauthorized personnel should not service batteries.
6. Contact your nearest Toshiba authorized service center for battery replacement.

Qualified Personnel ONLY!

Qualified Personnel is one that has the skills and knowledge relating to the construction, installation, operation, and maintenance of the electrical equipment and has received safety training on the hazards involved (Refer to the latest edition of NFPA 70E for additional safety requirements).

Qualified Personnel shall:

1. Have read the entire operation manual.
2. Be trained and authorized to safely energize, de-energize, ground, lockout and tag circuits and equipment, and clear faults in accordance with established safety practices.
3. Be trained in the proper care and use of protective equipment such as safety shoes, rubber gloves, hard hats, safety glasses, face shields, flash clothing, etc., in accordance with established safety practices.
4. Be trained in rendering first aid.

5. Be knowledgeable of batteries and the required handling and maintenance precautions.

For further information on workplace safety visit www.osha.gov.

Important Safety Instructions (cont'd)**WARNING**

Misuse of this equipment could result in injury and equipment damage. In no event will Toshiba Corporation be responsible or liable for either indirect or consequential damage or injury that may result from the misuse of this equipment.

**CAUTION**

Do not dispose of the batteries in a fire. The batteries may explode.

**CAUTION**

Do not open or mutilate the batteries. Released electrolyte is harmful to the eyes and skin and could also be toxic.

**DANGER**

A battery can present a risk of electrical shock and high short circuit current.

—Strict adherence to the following precautions is a requirement when working with batteries—

To be performed by **Qualified Personnel** only.

1. Verify that the UPS is off and that the power cord is disconnected from the power source.
2. Remove watches, rings or other metal objects.
3. Use tools with insulated handles to prevent inadvertent shorts.
4. Wear rubber gloves and boots.
5. Do not place tools or any metal parts on top of batteries.
6. Determine if the battery is inadvertently grounded. If inadvertently grounded, remove source of ground.

Contact with any part of a grounded battery can result in electrical shock.

The likelihood of shock will be reduced if such grounds are removed prior to installation or maintenance.

Instructions Importantes Concernant

LA SÉCURITÉ

CONSERVER CES INSTRUCTIONS

Cette notice contient des instructions importantes concernant la sécurité.



ATTENTION

Une battery peut présenter un risque de choc électrique, de brûlure par transfert d'énergie.



ATTENTION

L'élimination des batteries est règlementée. Consulter les codes locaux à cet effet.

Inspection/Storage/Disposal



CAUTION

Inspection

Upon receipt of the UPS, an inspection for shipping damage should be performed. Use caution when removing the unit from the pallet. Refer to labels or documentation attached to packing material.

Uncrating

Check the unit for loose, broken, bent or otherwise damaged parts. If damage has occurred during shipping, keep all original crating and packing materials for return to the shipping agent. The warranty does not apply to damage incurred during shipping. Ensure that the rated capacity and the model number specified on the nameplate conform to the order specifications.

Storage

During periods of non-use, the following guidelines are recommended for storage.

Storage Preparation

1. Power up the UPS and allow it to operate with no load for 24 hours to fully charge the batteries.
2. Stop the unit.
3. Place the MCCB switch in the Off position.

Storing Conditions

- For best results, store the UPS in the original shipping container and place on a wood or metal pallet.
- Storage temperature — $-20 - 40^{\circ}\text{C}$ ($-4 - 104^{\circ}\text{F}$).
- The optimum storage temperature is 21°C (70°F). A higher ambient temperature will require recharging more frequently during storage.

Avoid the following storage locations:

- Locations that are subject to extreme temperature changes or high humidity.
- Locations that are subject to high levels of dust or metal particles.
- Locations that are subject to excessive vibration.
- Inclined floor surfaces.

Storage Maintenance

- If stored at an ambient temperature less than 20° C (68° F), recharge the batteries every 9 months.
- If stored at an ambient temperature of 20° – 30° C (68° – 86° F), recharge the batteries every 6 months.
- If stored at an ambient temperature of 30° – 40° C (86° – 104° F), recharge the batteries every 3 months.

Disposal

Please contact your local or state environmental agency for details on disposal of electrical components and packaging in your particular area.

It is illegal to dump lead-acid batteries in landfills or dispose of improperly.

Please help our Earth by contacting the environmental protection agencies in your area, the battery manufacturer, or call Toshiba toll-free at (800) 231-1412 for more information about recycling.

Installation Precautions



1. Install the unit in a well-ventilated location; allow at least 10 cm (4 inches) on all sides for air ventilation and for maintenance.
2. Install the unit in a stable, level and upright position that is free of excessive vibration.
3. Install the unit where the ambient temperature is within the range specified.
4. Do not install the UPS in areas that are subject to high humidity.
5. Do not install the UPS in areas that allow exposure to direct sunlight.
6. Do not install the UPS in areas that allow exposure to high levels of airborne dust, metal particles, or flammable gases.
7. Do not install the UPS in areas near sources of electrical noise. Ensuring a proper earth ground will reduce the effects of electrical noise and will reduce the potential for electrical shock.
8. Do not install the UPS in areas that would allow fluids or any foreign object to get inside the UPS.
9. The UPS generates and can radiate radio-frequency energy during operation. Although RFI noise filters are installed inside of the unit, there is no guarantee that the UPS will not influence some sensitive devices that are operating near by. If such interference is experienced, the UPS should be installed farther away from the affected equipment and/or powered from a different source than that of the affected equipment.
10. The user should provide output over-current protection for hardwired UPS systems.
11. After ensuring that all power sources are turned off and isolated in accordance with established lockout/tagout procedures, connect the power source wiring of the correct voltage to the input terminals of the UPS.

12. Connect the output terminals of the UPS to the load (refer to NEC Article 300 – Wiring Methods and Article 310 – Conductors For General Wiring). Size the branch circuit conductors in accordance with NEC Table 310.16.

Conductor Routing and Grounding

1. Use separate metal conduits for routing the input power, output power, and control circuits.
2. Follow the wire size and tightening torque specifications.
3. Always ground the unit to reduce the potential for electrical shock and to help reduce electrical noise.
4. A separate ground cable should be run inside the conduit with the input power, output power, and control circuits.

**CAUTION**

THE METAL OF CONDUIT IS NOT AN ACCEPTABLE GROUND.

Operating Precautions



CAUTION

1. The UPS should not be powered up until the entire operation manual has been read.
2. The voltage of the input power source must be within the range of +10% to -30% of the rated input voltage. The input frequency must be within the rated input frequency range. Voltages and frequencies outside of the permissible range may activate the internal protection devices.
3. The UPS should not be used with a load that has a rated input that is greater than the rated output of the UPS.
4. Do not use the UPS to provide power to motors that require high starting current or with motors that require a long starting time, such as vacuum cleaners and machine tools (over sizing the UPS for lock rotor current would be required).
5. Do not insert metal objects or combustible materials in the ventilation slots of the UPS.
6. Do not place, hang, or paste any objects on the exterior surfaces of the UPS.
7. The capacitors of the UPS maintain a residual charge for a while after turning the UPS off. The required discharge time for each UPS typeform is provided via a cabinet label and a CHARGE LED. Wait for at least the minimum time indicated on the label and ensure that the CHARGE LED has gone out before opening the door of the UPS once the UPS power has been turned off.
8. Do not attempt to disassemble, modify, or repair the UPS. Call your Toshiba sales representative for repair information.
9. Turn the power on only after attaching ALL of the covers.
10. Do Not remove any covers of the UPS when the power is on.
11. If the UPS should emit smoke or an unusual odor or sound, turn the power off immediately.
12. The heat sink and other components may become extremely hot to the touch.

Allow the unit to cool before coming in contact with these items.

13. Warning signs should be placed on or near the load as a notification that the load is being powered by the UPS.
14. Additional warnings and notifications shall be posted at the equipment installation location as deemed required by Qualified Personnel.



While operating in the inverter mode, placing the breaker in the OFF position will switch the UPS to the battery backup mode. The output of the UPS will continue uninterrupted to the load. The unit must be in the bypass mode at the time that the breaker is placed in the OFF position for the UPS to shutdown power to the load.



After an Emergency Power Off (EPO), do not reset the breaker until the UPS has been fully discharged. The UPS could be damaged if the unit is not fully discharged before the breaker is reset.

1. Introduction

The information provided in this manual covers single phase 1000 – 1200 VA uninterruptible power systems. Included in this manual is information on the installation, operation, safety precautions, shipping, and storage of the equipment.

Installation must be carried out in accordance with this manual. Electrical installations must also follow local legislation and regulations. Only qualified personnel should install this equipment. Failure to comply with the warnings and precautions could prove to be fatal.

2. System Description

The purpose of the UPS is to protect sensitive systems from poor quality utility power, complete loss of power, or other associated problems. System types include computers, workstations, process control systems, telecommunications systems, sales terminals, or other critical instrumentation.

Electrical interference may occur causing problems in AC power. Interference may come from lightning, the power company, radio transmissions, or motors. Normal operation of sensitive electrical equipment requires protection against power outages, low or high voltage levels, frequency variations, differential and common-mode noises, and transients.

In order to prevent power line problems from reaching critical systems and causing damage to software, hardware or causing equipment to malfunction, the UPS helps by maintaining a constant voltage, isolating critical load output, and cleaning the utility AC power.

2.1 General Description

As a double conversion on-line UPS, it is able to supply uninterrupted, clean single-phase power to your critical systems while keeping batteries charged continuously, even if the utility power fails.

Other features of the UPS includes

- Auto-Restart and Cold Start features
- Programmable Load Shed Receptacle
- Intelligent Charger with Rapid Charge in only 3.5 hours to 90%
- Wide Input Voltage Window
- Wide Input Frequency Window for Complete Generator Compatibility
- Input Power Factor greater than 0.97
- Output Power Factor 0.70
- Multiple Languages LCD Display
- Free Run Mode - See detail explanation on page 4
- Diagnostic Tests - See detail explanation on page 4
- Optional Network Interface Card
- Optional Environmental Monitoring Device

In the event that a power failure lasts longer than the UPS backup time, the UPS will shut down. Upon power restoration, the UPS will restart automatically, which includes output power being restored to the load and the start of battery recharge.

See following figure for systemic applicable of the UPS system.

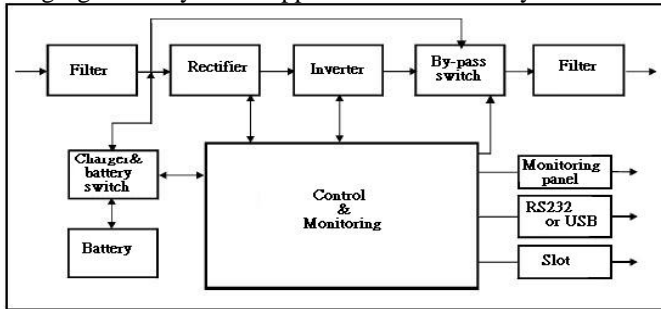


Figure 1. Block diagram

- An input filter reduces transients on the main supply.
- For maintaining full battery charge, AC-power is rectified and regulated in the rectifier feeding power to the inverter and battery converter.
- DC power is converted to AC in the inverter and passes it on to the load.
- Power to the load is maintained from the battery during a power failure.
- The converter increases voltage for the inverter as required.

Free Run Mode

Free run mode is a mode of operation in which the output frequency does not match input frequency. The UPS operates in free run mode when the input frequency is outside of the selected input frequency range. When starting the UPS, the targeted frequency is 50 or 60 Hz ± 0.25 Hz Refer to section 4.3 Front Panel Settings to set up bypass availability while running in free run mode.

Diagnostic Tests

When the UPS is started, a diagnostic test is executed automatically that checks the electronics and battery, and reports any problems on the LCD display.

The advanced battery management system monitors the performance of the battery and will indicate if battery replacement is required. The battery management system tests the battery every 30 days of normal mode operation. A battery discharge test is performed and reports any problems on the LCD display.

Except during the first 24 hours after startup while the UPS is in charging mode, diagnostic tests can be performed manually from the front panel when required.

2.2 System Configuration

The UPS device and the internal backup battery make up the system. Depending on the site and load requirements of the installation, available options may be utilized to create a tailored solution.

Planning a UPS system should include the following considerations:

- The total demand of the protected system shall dictate the output power rating (VA). Allow a margin for future expansion or calculation inaccuracies from measuring power requirements.
- Backup time needed will determine the battery size needed. If the load is less than the UPS nominal power rating then the actual backup time will be longer.
- The following options are available:
 - External Battery Cabinets, and
 - Connectivity options (Remote Contact, SNMP/WEB card).

The following UPS models are available.

Model	Backup time Internal batteries	Recharge time to 90% capacity
UPS 1000VA	7 min	4 hours
UPS 1200VA	6 min	4 hours

Additional External Battery Cabinets are available if more back-up time is needed.

3. Storage

Please adhere to the following instructions if the UPS is not installed when received:

- Store the equipment in its original packing and shipping carton.
- Store the unit in a temperature of 15° C to 25° C.
- Ensure that the equipment is fully protected from wet or damp areas and from moist air.

In order to maintain the vitality of the batteries, ensure that the UPS is recharged every 6 months for at least 8 hours during storage.

3. Installation

3.2 Environment

To ensure safe and proper operation, ensure that the installation conforms to the following specifications.





 
 

 
Ensure that the installation location is consistent with the following:

- Avoid extreme temperature and humidity. Maximal battery life can be attained with a recommended temperature range of 15° C to 25° C.
- Protect the equipment from moisture.
- Space and ventilation requirements must be met. Ensure there is at least 100mm (4 inch) behind and 50mm (2 inch) on the sides of the UPS for ventilation.
- Ensure that the front of the UPS remain supply clear for user access.

The External Battery Cabinets must be installed next to or underneath the UPS.


Vertical and Wall-mounted Installations with Accessories

Install the vertical and wall-mounted units as shown below.

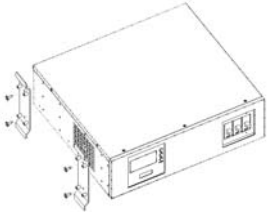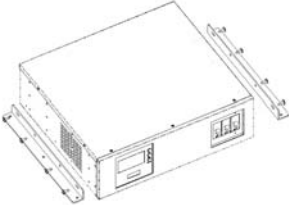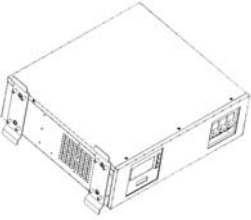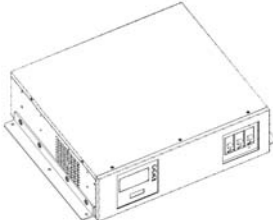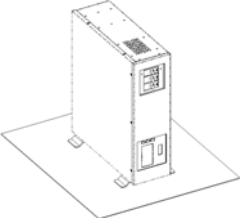Vertical Installation	Wall-mounted installation.
	
	
	
	


Rack-mounted Installation with Accessories

Install the rack-mounted unit as shown below.

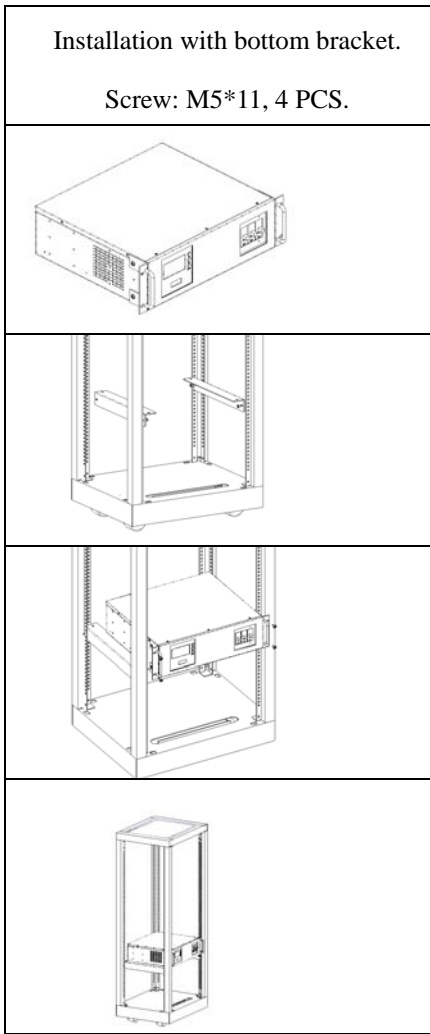



Stacked UPS Installation with accessories

Install the stacked unit as shown below.

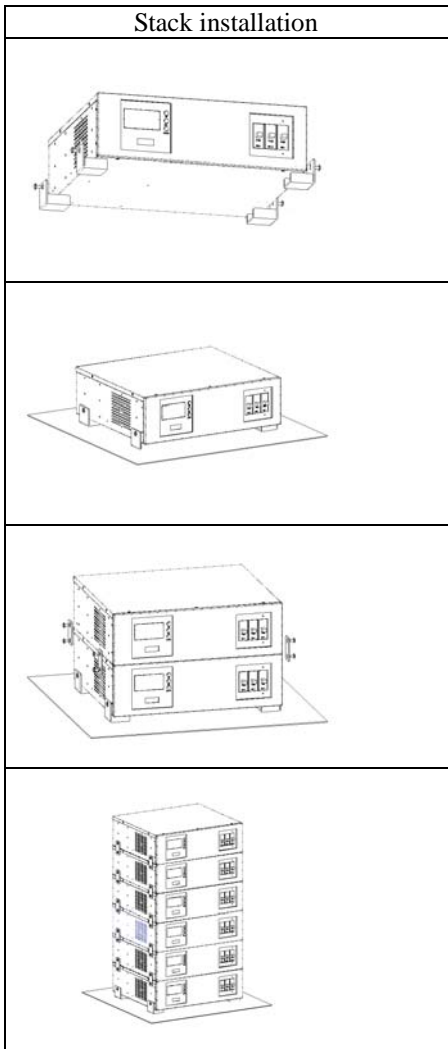


Rear Panel Views


1000VA – 1200VA Tower Rear Panel

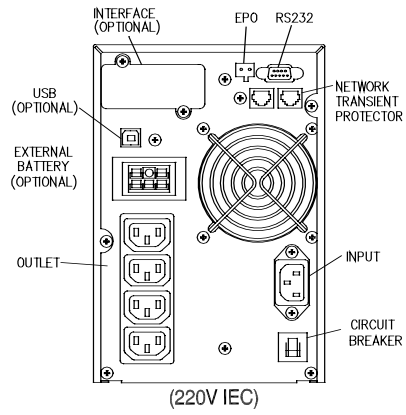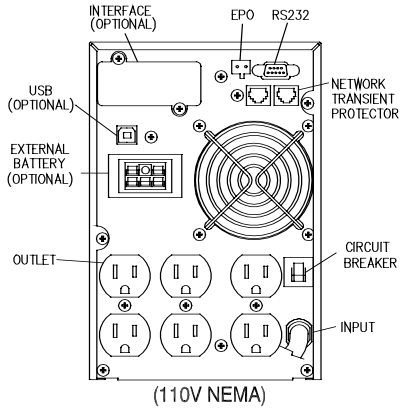

1000VA Rack mount (1U) Rear Panel


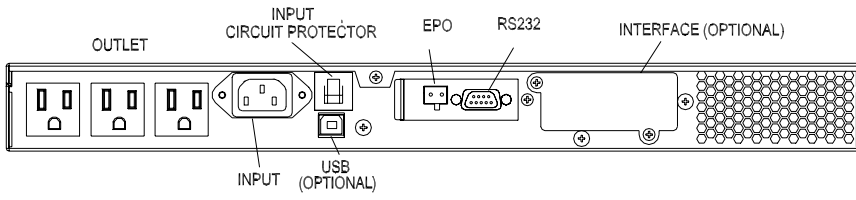


RM-1U 110V/220V NEMA

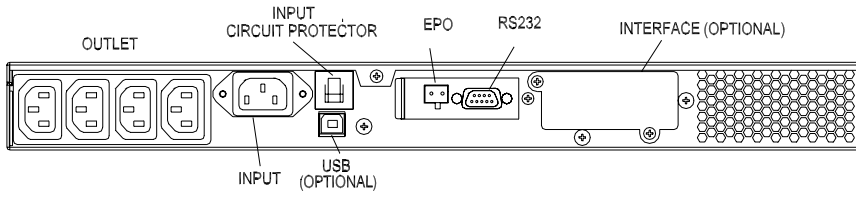

RM-1U 220V IEC

1000VA Rack mount (2U) Rear Panel

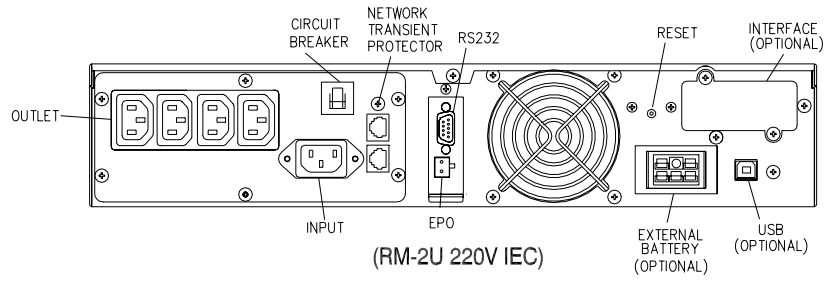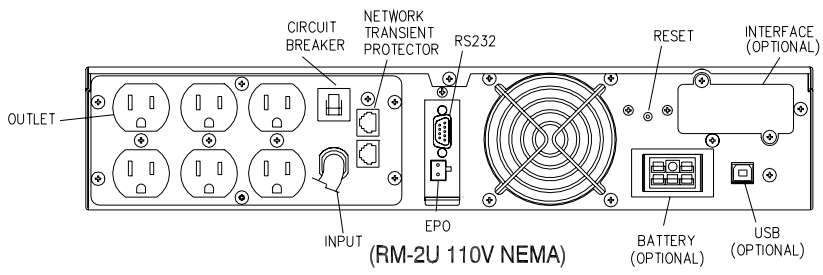

3.3 Connection to main supply and loads (1000 – 1200 VA)

- Ensure that the UPS is disconnected from the main supply and loads while connecting the External Battery Cabinets.
- Use the battery cable supplied with the External Battery Cabinet to connect the External Battery Cabinet to the UPS. If more than one battery cabinet is required, use the supplied cable.
- A familiarity with the UPS parameter settings is required if changing the Battery pack quantity as when using the External Battery Cabinets section 4.3 Front Panel Settings.
- Connect the input cable to the UPS and connect the other end to a grounded outlet. The batteries will charge automatically when connected to the main supply.

The UPS may be used immediately to power a load. However, the maximum battery back-up time will not be available until the recommended 8-hour minimum charge time has completed.

- If a Site Wiring Fault is displayed, rotate the connector (Schuko – electric contact) (see section 5.6 Troubleshooting).

After charging the UPS connect the load to the UPS (see the example in Figure 2 Example of Installation of Plug & Play products.

- Do not connect any devices to the UPS that may cause overloading of the UPS or that draws half-wave rectified current, such as hair dryers or vacuum cleaners.
- See section 4 Computer and Alarm Connections if computer or alarm (rear panel) connections are used.
- The installation is now complete.

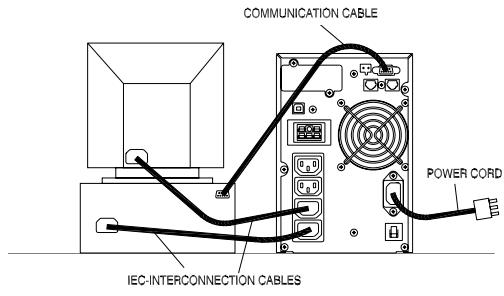


Figure 2 Example of Installation of Plug & Play products.

4.3 Front Panel Settings

Listed below are the default settings of the primary UPS parameters.

Settings	Options	Default	Remarks
1) O/P VOLT SET (Output Voltage Set)	100V/110V/115V/120V/127V 208/220/230/240 Vac	120V 230V	120V (FOR LV series) 230V (FOR HV series)
2) I/P FREQ SET (Input Frequency Set)	±2% ±5% ±7%	±5%	Input Frequency range in Free Run mode.
3) I/P BYPASS SET (Input Bypass Setting)	±10% +10% -15% +15/-20%	+10/-15%	Input Voltage range when Bypass mode is on.
4) FREE RUN SET	ON / OFF	ON	If ON, enable UPS runs on unsynchronized Mode. For example, if input frequency 55Hz, output frequency will stay at 60Hz. If OFF, disable UPS runs on unsynchronized mode. For example, if input frequency 55Hz, UPS will go to Battery mode.
5) HE MODE SET	ON / OFF	OFF	If ON, enable UPS runs on high efficiency mode. Bypass mode is on when power flows at 95% or lower. If OFF, disable UPS runs on high efficiency mode. Bypass mode is on when power flows at 85% or lower.
6) MANUAL BYPASS	ON / OFF	OFF	If ON, enable UPS switch to Bypass mode immediately.

Settings	Options	Default	Remarks
7) OUTLET SETTING	GROUP 1 / GROUP 2 Option 1: 1 On / 2 On Option 2: 1 Off / 2 On Option 3: 1 Off / 2 Off Option 4: 1 On / 2 Off	Option 1	This is a load-shed feature.
8) BATTERY TEST	TEST?		Perform battery test immediately
9) SILENCE SET	ON / OFF	OFF	
10) BAT CABINET SET	0 EXT B. PACKS 1 EXT B. PACKS 2 EXT B. PACKS	0	Shown options when battery cabinets are connected.
11) SITE FAULT SET	ENABLE / DISABLE		Alarm on main connector connected at wrong polarity or installation to main supply without group.
12) LANGUAGE	ENGLISH GERMAN FRENCH SPANISH ITALIAN	ENGLISH	
13) GENERATOR	ON / OFF		If ON, UPS will work with a very large range of voltages and frequencies, without switching back and forth from Line mode battery mode.
14) RS232 CONTROL	ENABLE / DISABLE		Option to enable and disable the RS232 port. USB share the communication line with RS232. Only one option may be used at a time.

Complete the installation entirely before changing the default settings or connecting a load to the UPS.

4. Computer and Alarm Connections

At the rear of the UPS is an interface that allows direct communication with a computer system (see figure 2). There is a RS232 serial data interface, a USB data interface, and an emergency power off switch. The RS232 port and the USB interface cannot be used simultaneously.

In addition there is an optional interface slot that allows for the installation of communications cards. It may be used in parallel with either the RS232 or USB ports.

 
An SNMP/WEB card is available for the optional interface slot that allows for the RemotEye II to manage and monitor the system over a network or over the internet.

RS-232 Standard Interface Port

Only the communication cable provided with the UPS may be used to connect the UPS to a computer when using the RS232 port of the UPS. Ensure that the operating system of the computer supports RS232 communications.

Other advanced power protection solutions, such as SNMP, are available from your dealer.

The RS-232 interface uses a 9-pin D-sub connector. The names and functions of the port pins are listed in the following table.



Pin #	Signal	Direction (re UPS)	Functions
2	TxD	Output	TxD Output
3	RxD	Input	RxD / Inverter Off Input
5	Common		Common
6		Output	Ac Fail Output
8		Output	Low Battery Output
9		Output	8-24 VDC Power

Table 1 : RS232 Pin Out Signal

USB Port

Connecting the UPS to a computer using the USB port of the computer requires USB compliant hardware, PC operating system support, and a UPS driver. The RS232 serial port cannot be used when using the USB port. The USB cable is a standard cable and may be purchased separately.

EPO Port (emergency power off)

A customer-supplied switch located remotely may be used to open the EPO connection and force the UPS output receptacles to be switched off. The EPO function shuts down the equipment immediately. An EPO will not provide an orderly shutdown. The UPS will have to be manually restarted in order to regain power to the outlets.

After an Emergency Power Off (EPO), do not reset the breaker until the UPS has been fully discharged. The UPS could be damaged if the unit is not fully discharged before the breaker is reset.

Network Transient Protector

The network transient protector, located on the back panel, has both IN and OUT RJ45 10 baseT jacks and will protect a single network connector. Connect the input connector to the jack labeled IN, and the output connector to the jack labeled OUT.

Load Segments

The sets of receptacles known as load segments, which provide organized shutdown and startup of the equipment. Less critical equipment can be turned off during power outages saving battery power for critical loads. The load group status can be viewed from the LCD display and can be changed if necessary.

Load	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%
1000VA Backup (min)	150	56	38	30	23	19	15	12	10	7
1200VA Backup (min)	80	37	21	19	18	15	13	11	8	6

5. User's Guide to Operations

Normal ongoing UPS operation requires little or no user input. Startup and shutdown requirements of the user are discussed in this section.

5.2 UPS Startup and Shutdown


Starting the UPS



- Ensure that installation is correct and that the input power cable is connected to a properly grounded outlet.
- Start the UPS by pressing the On/Off button on the front panel.
- The UPS will start the inspection of internal functions, main synchronization, and inverter startup. A successful completion allows for output power via the outlets.
- During the startup inspection the LCD will display Ready On. The LED will light up when output power has started and the LCD display will show Line Mode.
- Switch on the load.

Shutting Down the UPS

- Shut off and disconnect the load.
- Press and hold the UPS On/Off button for five seconds. The alarm will sound and the UPS will shut down.
- The LCD will momentarily display UPS OFF.
Note: In emergency situations the EPO should be used.



 


5.3 Button Operation

1. “” is the Load ON/OFF button.
 - (a) Press and hold the Load ON/OFF button for at least 3 seconds to turn on the UPS.
 - (b) While the UPS is operating, press and hold the Load ON/OFF button for at least 3 seconds to turn off the UPS.

2. “” is the Enter button.
 - (a) Press and hold the Enter button for at least 2 seconds to read the parameter settings of the UPS. Press the Enter button again to read the next parameter.
 - (b) Ten seconds of inactivity will return the display to the original status.
3. “” is the Function button.
 - (a) Press and hold the Function button for at least 2 seconds to access the selectable parameters. Press the Function button again to view the next parameter.
 - (b) Press the Enter button to view or change the displayed parameter.
 - (c) Ten seconds of inactivity will return the display to the original status.

5.4 Control Panel functions

The front panel is composed of five LED indicators, an LCD screen, and a speaker for audible alarms.

- ON  — is on when the UPS is turned on (green).
- ON-LINE  — is on when in the Normal or Static Bypass modes. Also indicates that there is voltage at the output terminals (green).
- ON-BAT  — is on while operating in the Battery mode.
- BYPASS  — is on while operating in the Bypass mode (yellow).
- ALARM  — is on during active UPS internal errors (red). FAULT is accompanied by an audible alarm. Press any of the front panel buttons to cancel the alarm.

Status of the UPS, measurements, and alarms are all indicated on the LCD screen.

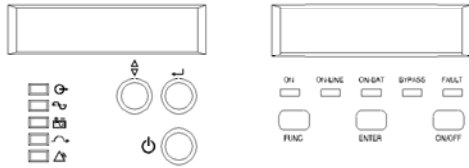


Figure 3 Control panel

Normal Display

The UPS status is shown in the normal display mode. The UPS Meters display and the Setting display may be accessed by pressing this button.

UPS Meters Display

Listed below are the parameters available for viewing from the UPS meters display.

Press this button to scroll through the parameters.

LCD Message	Description
O/P VOLT= xxx.xV	Shows Output AC Voltage
O/P FREQ= xx.x Hz	Shows Output Frequency
I/P VOL T= xxx.xV	Shows Input AC Voltage
I/P FREQ= xx.x Hz	Shows Input Frequency
BAT VOLT= xx.xV	Shows Battery Voltage
O/P LOAD%= xx%	Shows Load % of Max Load
O/P W= xW	Shows Output Watts
O/P VA= xVA	Shows Output VA
O/P CURR= xA	Shows Output Current
BACKUP TIME= xx min	Shows Estimated Backup Time in Minutes
BAT CHARG= xx%	Shows Approximate Percentage of Battery Capacity
TEMPERATURE= xxC	Shows Approximate Ambient Temperature
BAT PACK NUM= x	Shows External Battery Pack Number
RATING = xxxxVA	Shows UPS Rating
CPU VERSION xx.x	Shows CPU Version

UPS Configurations

- 1) Parameter settings may be viewed from the UPS Settings display.
- 2) To enter the configuration mode, press and hold the Function button for one second. The first configuration parameter will be shown on the LCD display.
- 3) Press the Function button again to scroll through the remaining parameters.
- 4) Press the Enter button to select a displayed parameter.
- 5) Press the Function button to scroll through the options for the selected parameter. Press the Enter button to select the setting.
- 6) If prompted to save the selection, press the Enter button to either confirm or save the selection. See the table on page 16 for a complete listing of the user-settable parameters.
- 7) If there is no user input for ten seconds, the UPS will exit the configuration mode and return to normal mode displaying Line mode.

UPS Manual Test

Manual UPS and Battery tests may be performed from the UPS configuration screen.

Tests may be performed when the battery is not being charged.

To run the battery test scroll to the “Manual Bat Test” parameter press the Enter button twice.

**** Note:** In order for the UPS to operate normally, Manual Bypass should always be set to OFF because the load will not be protected by the unit when Manual Bypass is ON.

***** Note:** Turn off the UPS and keep the AC power on to use the Generator function. (go to normal mode for \Generator\OFF).

5.5 Interpreting UPS Messages

Troubleshooting procedures described here provide instructions to be used to isolate UPS malfunctions.

Start the troubleshooting procedure in the event of a control panel alarm.

Audible Alarms

- While operating on battery power (ON BAT LED is on) the UPS will beep once at 5-second intervals.
- While operating on battery power and the battery power is low (ON BAT LED is flashing) the UPS will beep twice at 5-second intervals.
- In the event of an internal fault with an active alarm (ALARM LED is on), the UPS will provide a constant audible alarm and display an error message on the LCD display.
- While operating in the Bypass mode (BYPASS LED is on) the UPS will not beep.

Silencing an Alarm

With the exception of a LOW BATTERY Alarm, pressing any of the front panel buttons will turn off the alarm. Select Silent Alarm Mode to disable all audible alarms.

5.6 Troubleshooting

Displayed on LCD	Audible Alarm	Alarm Description	What You Should Do
Output Overload	Two Beeps/sec	The UPS is overloaded (in Line Mode). More power required than the UPS can provide. The UPS operates in bypass.	Remove loads from the UPS; least to most critical. If this solves the problem, the UPS will return to normal operation.
Battery Test	No Beeps	Battery test active.	No action needed. User Notification only.
Over-Charge	Constant Beep	Overcharged Batteries.	Turn off loads. Turn off UPS and call your local dealer.
Low Battery	2 Beeps/5 sec	UPS operating on Battery Power and will shut down soon due to low battery voltage.	The unit will restart Automatically when acceptable power returns.
On-Battery	1 Beep/5 sec	UPS operating on Battery Power.	Save your data and perform a controlled shutdown.
Charger Failure	Constant Beep	Failed Charger.	Phone service representative.
Over-Temperature	Constant Beep	High ambient Temperature.	Ensure that the UPS fans and vents are not blocked, and that the ambient temp. is < 40° C. If the problem persists call your service representative.
Output Short	Constant Beep	Output short circuit.	Call the service rep.
High output Voltage	Constant Beep	High output voltage.	Call the service rep.
Low Output Voltage	Constant Beep	Low output voltage.	Call the service rep.
Bus Fault	2 Beeps/sec	High internal DC bus Voltage.	Turn off loads. Turn off UPS and call the service representative.
Site Wiring Fault	1 Beep/sec	Voltage detected between neutral and ground.	UPS main connector wrong polarity. Rotate the connector (Schuko-electric contact). UPS installed to main supply without ground. See section 4.3 for information on how to disable the Site wiring alarm.
Line Abnormal	1 Beep/sec	Wrong AC Line backed up during auto restart.	

6. Maintenance

With a minimal amount of maintenance you can expect years of satisfactory operation from the UPS unit. The most critical issues for the reliability of the UPS are environmental issues. Ensure that the temperature and humidity are always in accordance with the specifications and keep the area around the unit clean and dust free.

The typical battery lifetime is 4 years when operated at 25° C.

Check the back-up time capability of the UPS/battery at 6 to 12 month intervals to ensure adequate support for the application.

7. Technical Specifications

7.2 Power Range 1000-1200 VA (LV)

General

Rated power: 1000 VA, 1200 VA at power factor 0.7
Technology: On-line, double conversion topology with automatic bypass

Input

Phase: Single phase with ground
Bypass Voltage: 96VAC-138 VAC (user selectable)
Input Voltage range: 80VAC-144 VAC
Frequency: 50/60 Hz Auto selection
Frequency window from main supply: 45-65 Hz
Synchronization window: ± 3 Hz
Input current: 1000 VA 8.2A, 1200 VA 10.0A
Input Power factor: 0.97

Output

Output Voltage: 100/110/115/120/127 VAC, selectable from LCD panel
Voltage regulation: $\pm 2\%$
Voltage distortion: $< 5\%$ THD at full non-linear load, $< 3\%$ THD at full linear load
Frequency regulation: ± 0.25 Hz (battery or free running mode)

7.3 Power Range:1000 VA (19" Rack-mount model, LV, 1U & 2U)

General

Rated power: 1000 VA at power factor 0.7
Technology: On-line, double conversion topology with automatic bypass

Input

Phase: Single phase with ground
Bypass Voltage: 96VAC- 138VAC (user selectable)
Input Voltage range: 80VAC- 144VAC
Frequency: 50/60 Hz Auto selection
Frequency window from main supply: 45-65 Hz
Synchronization window: ± 3 Hz
Input current: 1000 VA 8.2A
Input Power factor: 0.97

Output

Output Voltage: 100/110/115/120/127 VAC, selectable from LCD panel
Voltage regulation: $\pm 2\%$
Voltage distortion: $< 5\%$ THD at full non-linear load, $< 3\%$ THD at full linear load:
Frequency regulation: ± 0.25 Hz (battery or free running mode)
Dynamic response: $\pm 9\%$ max from 100% to 20 % or from 20% to 100 % linear load:
Overload capacity: 100-125% 1 min, 125-150% 10 sec
Efficiency: greater than 86%

Environmental

Ambient temperature: $+0\text{ }^{\circ}\text{C}$ to $+40\text{ }^{\circ}\text{C}$
Recommended temperature: $+15\text{ }^{\circ}\text{C}$ to $+25\text{ }^{\circ}\text{C}$
Storage temperature: $-15\text{ }^{\circ}\text{C}$ to $+50\text{ }^{\circ}\text{C}$
Cooling: Forced air-cooling
Humidity: 0-95%, non-condensing
Audible noise: < 45 db normal and battery mode (1000 ~1200 VA)

7.4 Power Range 1000-1200 VA (HV)

General

Rated power: 1000 VA, 1200 VA at power factor 0.7
Technology: On-line, double conversion topology with automatic bypass

Input

Phase: Single phase with ground
Bypass Voltage: 184VAC-265VAC (user selectable)
Input Voltage range: 160VAC-276VAC
Frequency: 50/60 Hz Auto selection
Frequency window from main supply: 45-65 Hz
Synchronization window: $\pm 2.5\text{Hz}$
Input current: 1000 VA 4A, 1200 VA 5.2A
Input Power factor: 0.97

Output

Output Voltage: 208/220/230/240 VAC, selectable from LCD panel
Voltage regulation: $\pm 2\%$
Voltage distortion: $< 5\%$ THD at full non-linear load, $< 3\%$ THD at full linear load
Frequency regulation: $\pm 0.25\text{ Hz}$ (battery or free running mode)
Dynamic response: $\pm 9\%$ max from 100% to 20% or from 20% to 100% linear load
Overload capacity: 100-125% 1 min, 125-150% 10 sec
Efficiency: greater than 86%

7.5 Power Range 1000 VA (19" Rack-mount model, HV, 1U & 2U)

General

Rated power:	1000 VA at power factor 0.7
Technology:	On-line, double conversion topology with automatic bypass

Input

Phase:	Single phase with ground
Bypass Voltage:	184VAC- 265VAC
Input Voltage range:	160VAC-276VAC
Frequency:	50/60 Hz Auto selection
Frequency window from main supply:	45-65 Hz
Synchronization window:	± 3Hz
Input current:	1000 VA 4A
Input Power factor:	0.97

Output

Output Voltage:	208/220/230/240 VAC, selectable from LCD panel
Voltage regulation:	± 2%
Voltage distortion:	< 5% THD at full non-linear load, < 3% THD at full linear load
Frequency regulation:	± 0.25 Hz (battery or free running mode)
Dynamic response:	± 9 % max from 100% to 20 % or from 20% to 100 % linear load
Overload capacity:	100-125% 1 min, 125-150% 10 sec
Efficiency:	greater than 86%

Environmental

Ambient temperature:	+0 °C to +40 °C
Recommended temperature:	+15 °C to +25 °C
Storage temperature:	-15 °C to +50 °C
Cooling:	Forced air-cooling
Humidity:	0-95%, non-condensing
Audible noise:	< 45 db normal and battery mode (1000 VA) < 50 db normal and battery mode (1200 VA)

Standard

Safety:	EN50091-1-1
Emissions:	EN50091-2
Immunity:	EN50091-2 B (1000-1200VA)

Tower HV Model

OUTPUT POWER	1000VA/700W	1200VA/840W
Connection Input	IEC 320 (10A)	IEC 320 (10A)
Connection Output	4 x IEC 320 (10A)	4 x IEC 320 (10A)
Battery type	Lead-acid 9Ah/12V	Lead-acid 9Ah/12V
Number of batteries	3	3
Backup time/full load	7 min	6 min
Recharge time	<4 hours to 90%	<4 hours to 90%
Dimensions WxDxH (mm)	420x152x238	420x152x238
Ship Dimensions WxDxH (mm)	546x280x356	546x280x356
Dimensions W x D x H (inch)	16.5x6x9.4	16.5x6x9.4
Ship Dimensions WxDxH (inch)	21.5x11x14	21.5x11x14
Weight kg (lb)	16.2 (35.6)	17 (37.5)
Ship Weight kg (lb)	18.2 (40)	19 (41.8)

19" Rack-mount HV Model

OUTPUT POWER	1000VA/700W 1U	1000VA/700W 2U
Connection Input	IEC 320 (10A)	IEC 320 (10A)
Connection Output	4 x IEC 320 (10A)	4 x IEC 320 (10A)
Battery type	Lead-acid 9Ah/ 6V	Lead-acid 9Ah/12V
Number of batteries	4	3
Backup time/full load	4 min	7 min
Recharge time	<4 hours to 90%	<4 hours to 90%
Dimensions WxDxH (mm)	525x428x44	425x428x84
Ship Dimensions WxDxH (mm)	645x546x206	553x546x206
Dimensions W x D x H (inch)	20.7x16.85x1.75	16.73x16.9x3.5
Ship Dimensions WxDxH (inch)	25.4x21.5x6.6	21.75x21.5x8.11
Weight kg (lb)	15.5 (34)	17 (38)
Ship Weight kg (lb)	17.3(38.5)	19.3(42.5)

Tower LV Model

OUTPUT POWER	1000VA/700W	1200VA/840W
Connection Input	5-15R	5-15R
Connection Output	6 x 5-15R (US)	6 x 5-15R (US)
Battery type	Lead-acid 9Ah/12V	Lead-acid 9Ah/12V
Number of batteries	3	3
Backup time/full load	7 min	6 min
Recharge time	<4 hours to 90%	<4 hours to 90%
Dimensions WxDxH (mm)	420x152x239	420x152x239
Ship Dimensions WxDxH (mm)	546x280x356	546x280x356
Dimensions W x D x H (inch)	16.5x6x 9.4	16.5x6x 9.4
Ship Dimensions WxDxH (inch)	21.5x11x14	21.5x11x14
Weight kg (lb)	16.2 (35.6)	17 (37.4)
Ship Weight kg (lb)	18.2(40)	19.3(42.5)

19" Rack-mount LV Model

OUTPUT POWER	1000VA/ 700W 1U	1000VA/700W 2U
Connection Input	5-15R	5-15R
Connection Output	3 x 5-15R (US)	6 x 5-15R (US)
Battery type	Lead-acid 9Ah/ 6V	Lead-acid 9Ah/12V
Number of batteries	4	3
Backup time/ full load	4 min	7 min
Recharge time	<4 hours to 90%	<4 hours to 90%
Dimensions W x D x H mm	525x428x45	425x429x 89
Ship Dimensions WxDxH (mm)	645x546x206	553x546x206
Dimensions W x D x H (inch)	20.7x16.85x1.75	16.73x16.9x3.5
Ship Dimensions WxDxH (inch)	25.4x21.5x6.6	21.75x21.5x8.11
Weight kg (lb)	15.5 (34.1)	17.0 (37.6)
Ship Weight kg (lb)	17.5(38.5)	19.3(42.5)

8. Warranty Information

TOSHIBA INTERNATIONAL CORPORATION LIMITED WARRANTY POLICY

(48 contiguous U.S. States, Canada, Mexico)

(UNINTERRUPTIBLE POWER SUPPLIES-UPS)

TOSHIBA INTERNATIONAL CORPORATION (“TIC”) warrants that the 1000 Series Uninterruptible Power Supplies (“UPS”) and Uninterruptible Power Supply Battery (“BATTERY”) sold by TIC to the end-user (“User”) shall be free of defects in material and workmanship.

Series	Capacity	UPS Unit		Battery		Dispatch
		Warranty ¹	On-Site ²	Warranty ¹	On-Site ²	
1000	1000VA 1200VA	36 months	No, Depot	24 months	No, Depot	M-F, 8 ^{am} -5 ^{pm} CT

Note 1: The warranty period begins from the shipment date. The shipment date is determined by the date on the TIC Bill of Lading.

Note 2: For the 1000 Series the warranty applies if the unit is sent and returned (paid for) by the user to/from the Toshiba International Corporation or a Toshiba International Corporation designated Authorized Service Center.

If any UPS, part of UPS, and/or BATTERY fails to conform or is defective then TIC, at this option, will repair or replace defective component(s).

LIMITATIONS AND EXCLUSIONS

This limited warranty shall not cover the UPS, UPS part, or BATTERY during their respective warranty periods, if the following storage, maintenance, installation, operating conditions are not met throughout the warranty periods (5 conditions below):

VALVE REGULATED LEAD ACID (VRLA) BATTERIES FOR TOSHIBA INTERNATIONAL CORPORATION UPS REQUIRED OPERATING CONDITIONS		
1. Temperature	Annual Temperature (77°F) Average 25°C	Temperature per cell < 32°C (89°F) for more than 30 days
2. Maximum number of full charge/discharge cycles	Discharge time	Maximum Number of Cycles (24 months)
	30 minutes	69
	15 minutes	86
	10 minutes	110
	5 minutes	130
VALVE REGULATED LEAD ACID (VRLA) BATTERIES FOR TOSHIBA INTERNATIONAL CORPORATION UPS INSTALLATION AND MAINTENANCE CONDITIONS		
3. Storage	While UPS is in transit or storage it must always be in suitable temperature (see condition 1).	
4. External Batteries	Parallel battery string applications must be approved by TIC in writing.	
5. Idle Batteries	User must recharge the batteries if not in use (charged) for more than 6 months.	

1. The Warranty does not cover damage or defects caused by misuse, improper application, wrong or inadequate electrical current/voltage/frequency, inadequate connections, inadequate water or drain services, user negligence, repair by non-Toshiba International Corporation designated personnel, accident during shipment, tampering, alterations, a change in UPS and/or BATTERY location or application, exposure to the elements, acts of God, theft, sabotage, installation contrary to TIC's recommendations or specifications (Published Operation Manuals), or if the serial numbers have been altered, defaced, or removed.
2. Repair or replacement of a defective UPS, UPS part, and/or BATTERY does not extend the respective original warranty period. All defective UPS, UPS parts, and/or BATTERIES shall be the property of TIC upon replacement.
3. The sales contract contains the entire obligation of Toshiba International Corporation and constitutes the sole and exclusive remedy of all purchasers and users of the UPS, UPS part, and/or BATTERY. TIC's responsibility for UPS, UPS Parts, and/or BATTERY shall not exceed one times the net UPS and/or BATTERY purchase price.

Procedure for Defective Product Screening and Disposition

User must contact TIC via e-mail upsservice@tic.Toshiba.com, or phone 1-877-867-8773 (outside the U.S. call 713-466-0277) to report a defect in a UPS, UPS part, and/or BATTERY. Subject to the limitations of TIC policy and product type, TIC service, or TIC service representative shall repair/replace the UPS/part warranted hereunder, without charge for material or labor. If TIC determines that the requested repair is not covered under this limited warranty policy, TIC shall **advise** customer and quote cost of repair. Repair charges shall be based on service parts price and prevailing service charges at the time of repair. **In no event after the expiration of the respective warranty period will warranty work be performed.**

In the event of a defective BATTERY claim (stand-alone and/or cabinet) TIC will use its published Battery Diagnostic Document to evaluate warranty applicability. TIC will confirm that the storage, maintenance, installation, and operating conditions were met. The BATTERY capacity will be tested in accordance with the “performance test” guidelines IEEE STD 450. Should the BATTERY fail to deliver 70% of its rated capacity it shall be deemed defective and will be replaced. Either float or cyclic service will be used to determine the warranty credit (as per published Battery Diagnostic Document). The typical credit applied will be as listed in the following table.

Credit for Replacement Battery When Approved Warranty		
Time from Shipment	UPS Batteries	Cost to Customer
(months)	% Credit	% List Price
0-24	100	0
25-30	55	45
31-36	45	55
37-42	35	65
43-48	25	75
49-54	15	85
55-60	5	95

MODIFICATIONS

No **representative**, salesperson, agent, distributor, **or** employee of TIC is authorized to modify any of the terms of the warranty, unless modifications are made in writing and signed by an authorized TIC officer.

TOSHIBA

TOSHIBA INTERNATIONAL CORPORATION

INDUSTRIAL DIVISION

13131 West Little York Road, Houston, Texas 77041

Tel 713/466-0277 Fax 713/466-8773

US 800/231-1412 Canada 800/872-2192 Mexico 01/800/527-1204

www.tic.toshiba.com

Copyright 6/2005