# 8 Pin Plug Type Counter


## DIN W48×H48mm 8 Pin Plug Counter

## Features

- Upgraded counting speed: 1cps / 30cps / 2kcps / 5kcps
- · Decimal point setting (Fixed decimal point of display)
- Wide range of power supply: 100-240VAC 50/60Hz

12-24VAC 50/60Hz, 12-24VDC universal

- Memory protection for 10years (Using non-volatile semiconductor)
- · Selectable Up/Down for counting value
- · Built-in Microprocessor

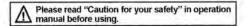



## Ordering Information

3	Output	A	Single preset
	Compar	В	Indicator
	Digit	4	9999 (4digit)
		5	99999 (5digit)
Item		FS	8-pin plug counter

## Specifications

Model	Single preset	FS4A	-	
	Totalizer (Indicator)	=	FS5B	
Digit		4digit	5digit	
Digit size		W3.8×H7.6mm	W4×H8mm	
Power	AC power	100-240VAC 50/60Hz		
supply	AC/DC power	12-24VAC 50/60Hz, 12-24VDC		
Allowable vol	tage range	90 to 110% of rated voltage		
Davidson	AC power	• Indicator: Max. 4.7VA • Single preset: Max. 5.7VA (100-240VAC 50/60Hz)		
Power consumption	AC/DC power	Indicator: Max. 4.5VA • Single preset: Max. 5.5VA (12-24VAC 50/60Hz)     Indicator: Max. 2.8W • Single preset: Max. 3W (12-24VDC)		
vlax, counting	speed for CP1, CP2	Selectable 1cps/30cps/2kcps/5kcps by internal DIP switch		
Min. input signal width	RESET input	Approx. 20ms		
	COUNT IN	No-voltage input		
Input	RESET	Impedance at short-circuit: Max. 470kΩ     Residual voltage at short-circuit: Max. 1VDC     Impedance at open-circuit: Min. 100kΩ		
One-shot output time		0.05 to 5sec.		
Control	Туре	SPST (1a)		
output	Contact	250VAC 3A resistive load	-	
Memory prote	ection	Approx. 10 years (When using non-volatile semiconductor memory)		
External pow	er	12VDC ±10% 50mA max.		
Insulation resistance		100MΩ (at 500VDC megger)		
Dielectric stre	ength	2000VAC 50/60Hz for 1 minute		
Noise	AC power	±2kV the square wave noise (pulse width: 1μs) by the noise simulator		
strength	DC power	±500V the square wave noise (pulse width: 1μs) by the noise simulator		
(dentina	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each X, Y, Z direction for 1 hou		
Vibration	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each X, Y, Z direction for 10 m		
Charle	Mechanical	300m/s² (approx. 30G) in each X, Y, Z direction for 3 times		
Shock	Malfunction	100m/s² (approx. 10G) in each X, Y, Z direction for 3 times		
Relay	Mechanical	Min. 10,000,000 operations	_	
life cycle	Electrical	Min. 100,000 operations (250VAC 3A at resistive load		
Fucility was	Ambient temperature	-10 to 55°C, storage: -25 to 65°C		
Environment	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH		
Unit weight		Approx. 130g	Approx. 120g	

\*Environment resistance is rated at no freezing or condensation.

(B)
Rither
Optile
Sensors
(C)
Deprivation
Sensors
(D)
Provintity
Sensors
(E)
Pressure
Sensors
(F)
Rotary
Encodors
(G)
Connectors
(G)
Connectors
(G)
Connectors
(G)
Sensors
(H)
Temperatum
Controllers
(I)
SSRs-Present
Controllers

(K)
Timers

(K)
Timers

(L)
Panel Meters

(M)
Tacha J
Spiest / Pulsu Motors

(N)
Display-Units

(D)
Sensor Cantrollers

(P)
Switching Meter Power Supples


(A)
Stepper Motors
& Drivers
& Controllers


(R)
Graphic Logic
Pacels

(5)
Freid Network
Devices

(T)
Software

# **FS Series**

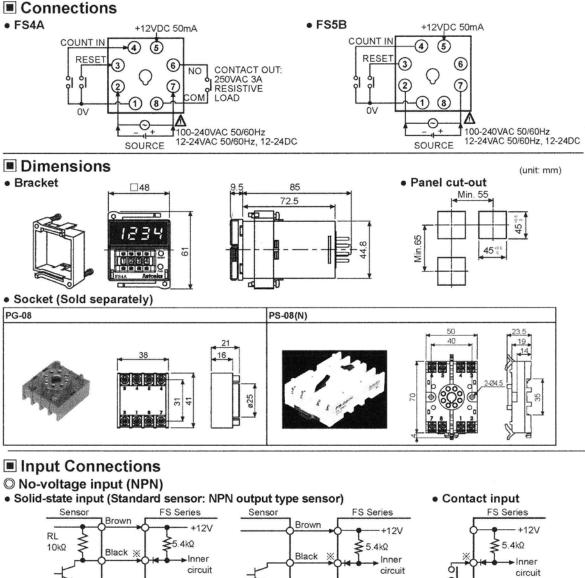

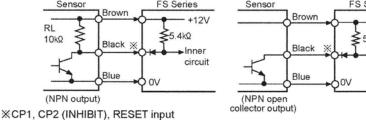


XPlease select the counting speed as 30cps when it is used for counter.

### O Voltage input (PNP)


FXY series is for no voltage input type, it is not available to count applying DC voltage from the external. For using PNP type sensor, please use as the following to count.

## PNP output sensor

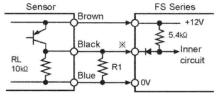

XPlease set R1 value to make the composed resistance of RL+R1 as Max. 470Ω is an impedance for short-circuit. XCP1, CP2 (INHIBIT), RESET input

#### PNP open collector output type sensor

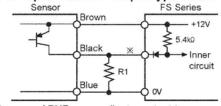



XIn case of PNP open collector output type sensor, please connect lower than 470Ω of R1 to input terminal before using.

J-60


#### Autonics


# 8 Pin Plug Type Counter

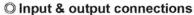

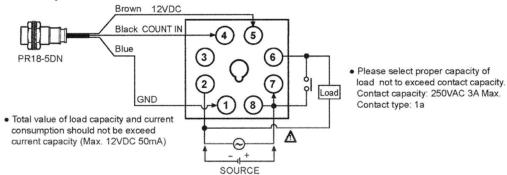

## Description Of Inner DIP Switches

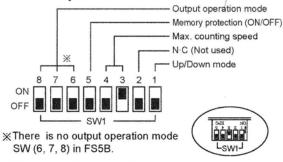

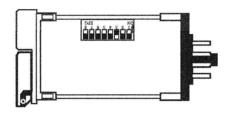

The max. counting speed is upgraded as 8 DIP SW numbers.

#### · Max. counting speed

SW1	Function
ON A	1cps
ON 4	30cps
3 4 ON OFF	2kcps
ON M	5kcps

## Up/Down mode


SW1	Function
ON OFF	Down mode
ON OFF	Up mode

## Memory protection

SW1	Function
ON OFF	Disable the memory protection
ON OFF	Enable the memory protection

## Setting Function Of Decimal Point

Display the decimal point.

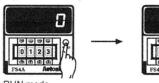

RUN mode

※Press RESET button for over 3sec., it advances to decimal point setting mode.






XSet the position of decimal point using ♠, 

→ button of digital switch.



Return to RUN mode XPress RESET button for over 3sec., it returns to RUN mode.

## Changing the decimal point

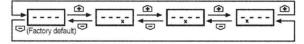

XIt returns to RUN mode if no RESET button or digital switch is applied for 60sec. in decimal point setting status.

XThe decimal point setting is existed in indication type.

**Autonics** 

B)

(C) Door/Area

> (D) Proximity

(E) Pressure Sensors

(F) Rotary

(G)

(H) Temperature

(I) SSRs / Power



(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display

(O) Sensor Controllers

Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels


(S) Field Network Devices

Software


# **FS Series**

## Counting Operation Of Indication Mode (Indication Model)


## Up mode

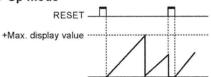

## Down mode

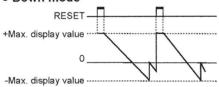

## Output Operation Mode

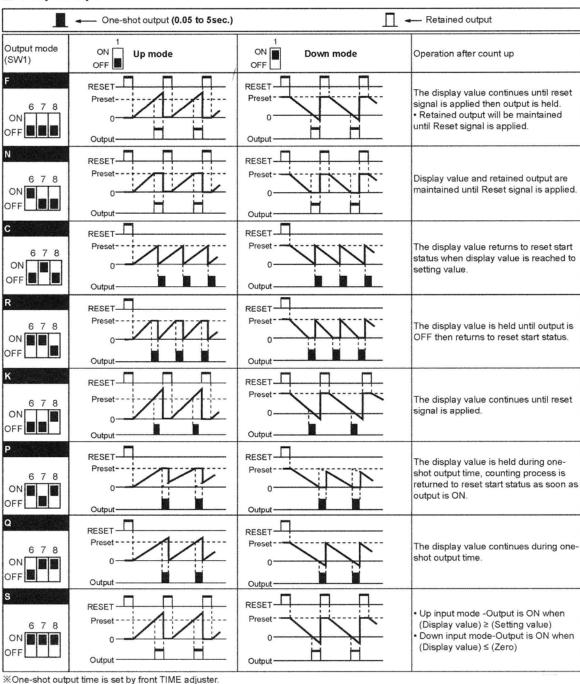

# 8 Pin Plug Type Counter

## Proper Usage


### Reset function

### Reset

In case of changing the input mode after supplying the power, please take a external reset or manual reset. If reset is not executed, the counter will be working as previous mode.

#### · Reset signal width

It is reset perfectly when the reset signal is applied during min. 20ms regardless of the contact input & solid-state input.

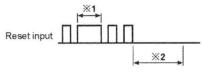


- X1: In case of a contact reset, it is reset perfectly if the ON time of reset signal is applied during min. 20ms even though chattering occurs.
- X2: It can be input the signal of CP1&CP2 after min. 50ms from closing time of reset signal.

## O Sensor power

The power 12VDC which is provided to sensor is built in it. Please use it under Max. 50mADC.


## O Min. signal width

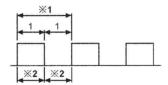

X1: Please make duty ratio (ON/OFF) 1:1.

#### Max. counting speed

This is a response speed per 1 sec. when the duty ratio (ON:OFF) of input signal is 1:1. If the duty ratio is not 1:1, the width between ON and OFF should be over min. signal width and the response speed is getting slower against input signal. If either ON or OFF signal is shorter than minimum signal width, this product may not respond.

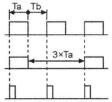

Therefore Ta (ON width) and Tb (OFF width) needed to be over min. signal width

Max. counting speed is 1/2 value of rated spec. when duty ratio is 1:3.

It can not respond if it is smaller than min. signal width (Ta).

## O Error display

-	Error signal	Error description	Returning method
-	ErrD	Zero setting status	Change the setting value to non zero status


\*\*When Error is displayed, the output continues OFF state. \*\*There is no Error function in indicator.




## O Detach the case from body

While pushing the Lock part with with driver to the front, push the terminal block.

1) Widen the lock device toward outside, push the plug to the front.

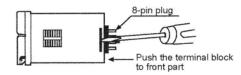


2) Detach the case.

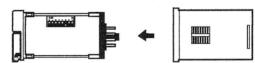

XPlease be careful to use with tools, it may cause injury.

#### O Power

The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not work at this time. And also the inner circuit voltage drops down for the last 500ms after power off, the input may not work at this time.

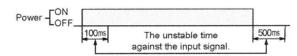

(A)
Photoelectric
Sensors

(B)
Fiber
Optic
Sensors

(C)
Door/Area
Sensors

(D)
Proximity
Sensors

(E)
Pressure
Sensors

(G)
Connectors/
Sockets

(J) Counters

SSRs / Power

(L)

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

Field Network Devices

(T) Softwar